

RBB56-BLE User Guide

mcgrathlocks.com.au



DOWNLOAD & INSTALL



Download and install the McGrath Locks App
Enable your smart phone to scan QR code to download the app. Also you can search "McGrath Locks" on Apple Store or Google Play to download the app.

McGrath Locks Bluetooth Wireless Keypad — User Guide

Product Overview

This is a McGrath Locks Bluetooth Wireless Keypad, designed for use with any device compatible with the McGrath Locks App.

Product Specifications

- Model: RBB56-BLE
- Dimensions: 148 x 56 x 22.5 mm
- Bluetooth Version: Bluetooth 5.4 BLE
- Supported Systems: Android 4.3 and above, iOS 7.0 and above
- Power Input: 3 x AAA batteries
- Working Voltage: 4.5V
- Standby Current: <20 μ A
- Operating Temperature: -20°C to 50°C
- Maximum Supported Locks: Can be paired with up to 3 locks simultaneously

Entering Configuration Mode

If the keypad is not yet added to any lock or access controller:

- After installing the batteries, press any button — or enter *529# — to enter configuration mode.

If the keypad is already added to a lock (and not at the 3-device limit):

- Enter *529# xxxxx #, where xxxxx is the administrator password of any lock currently paired with the keypad.

Adding the Keypad to a Lock

1. Put the keypad into configuration mode.
2. Open the McGrath Locks App and select the lock or access controller.
3. Go to Settings → Wireless Keypad → Add Wireless Keypad.
4. Follow the in-app instructions to complete the process.

Removing the Keypad from a Lock

1. Put the keypad into configuration mode.
2. Open the McGrath Locks App and select the lock the keypad is paired with.
3. Go to Settings → Wireless Keypad.

RECOMMENDED: LOCK SETUP WITH APP

It is highly recommended to set up the lock using the McGrath Locks App.

The app simplifies programming and provides an easier way to manage your locks.



DOWNLOAD & INSTALL

4. Swipe left on the keypad entry or long-press it, then tap Delete.
5. Follow the in-app instructions to complete removal.

Important Notice

PIN codes and Mifare cards must be added through the lock or access controller in the McGrath Locks App. After adding them, you can enter the PIN or tap the Mifare card on the wireless keypad to unlock the device.

Additional Information

- Each lock or access control device can be paired with only one wireless keypad at a time.
- A single wireless keypad can be paired with up to three locks simultaneously.
- If the app displays an error when adding the keypad, first remove it from the existing lock, then try adding it to the new one.